


Removal of air bubble from printhead ink chamber

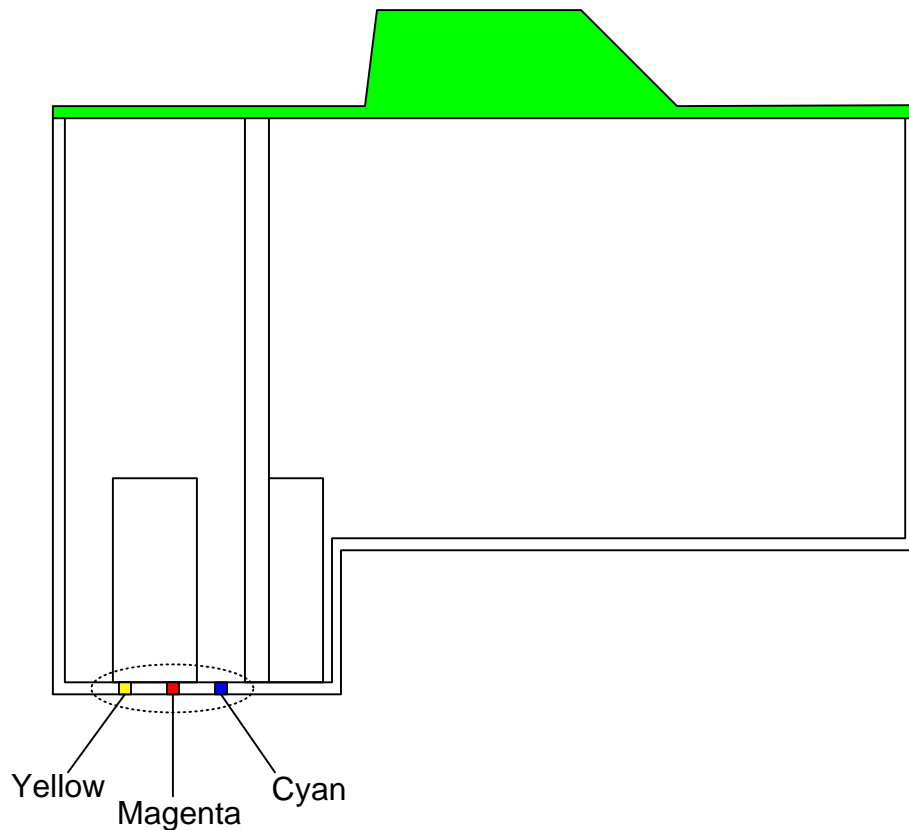

The color chambers above the printhead surface should be solid in color. If any gap in color exists ink will not be printed correctly. Similar to an air lock in a pump preventing efficient pumping of fluid. Removal of the air can be accomplished by snapping a finger to the lower side of the print cartridge. **NOT THE PRINT SURFACE BOTTOM!!!** This is similar to removing bubbles from the side of glass filled with a carbonated beverage.

